

Instruction Manual

Please scan the QR code to access the
Motion Sensing / More game APP and
video tutorials



Motion Sensing
APP



More Game APP
(20000+)

Lethigh Game

Lethigh game motion sensing controller

Usage Method (Motion - Sensing Mode)

Note: Keep the controller is in Motion - Sensing Mode. Press the Power Button or Press the Power Button + Button A for 3 seconds to enter Motion - Sensing Mode.


1. Download and install the "Lethigh" APP on various application platforms.



2. Open the "Lethigh" APP, register and log in, then click the "Add Devices" button in the top right corner of the homepage.



3. Turn on the device switch, and then click "Connect" on the device that pops up.

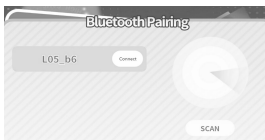

4. After a successful connection, you need to enter the activation code provided in this manual when using it for the first time.

Usage Method (XBOX Mode)

Note: Before use, ensure the controller is in XBOX Mode. Long - press the Power Button + Button X for 3 seconds to enter XBOX Mode.

1. Enter the Bluetooth function in the phone's settings, find the Bluetooth signal of "XBOX Wireless Controller" and click to connect.



2. After the Bluetooth connection is successful, scan the QR code in this manual to download the simulator APP. Install the APP and then you can use it.

Connection state

Description	Operating
Power on	Long - press the Power Button for 3 seconds
Manual shutdown	Long - press the Power Button for 3 seconds
Motion Sensing Mode	Long - press the Power Button to turn on the device / Long - press the Power Button + A for 3seconds
XBOX Mode	Long - press the Power Button + Button X for 3 seconds
Mobile Game Mode	Long - press the Power Button + Button Y for 3 seconds

Indicator Light Status

Light status	Operating
Slow Flashing (1Hz)	Motion - Sensing / XBOX / Mobile Game Mode Connecting
Steady On	Connected Status

Battery Level Instructions

Battery Level	Motion - Sensing Mode	XBOX Mode	Mobile Game Mode
Above 20%	Blue Light	White Light	Green Light
Below 20%	Red Light	Purple Light	Yellow Light

Additional Indicator Light Status

Charging Indicator	Charging: Green Breathing Light Fully Charged: Steady Green Light
Joystick Calibration	Calibrating: Red and Blue Indicators alternate slow flashing (1Hz) Calibration Completed: Red and Blue Indicators alternate fast flashing (2Hz) for 3 seconds
6 - Axis Calibration	Calibrating: Red and Green alternate slow flashing (1Hz) Calibration Completed: Red and Green Indicators alternate fast flashing (2Hz) for 3 seconds
Low Voltage Alert	Red Light flashes fast (2Hz) for 5 seconds, then the device shuts down

Host parameters

Rated Charging Input: 5V == 1A

Communication Mode: Bluetooth


Battery Capacity: 350mAh

Transmission Distance: 10m

Battery Type: Lithium Battery

Bluetooth Version: 5.3

Appearance introduction

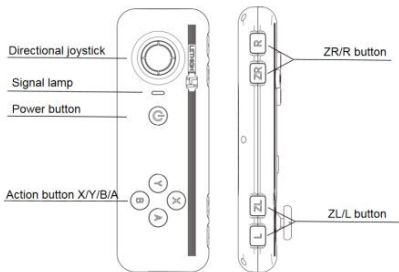

Activation Code



This is the unique identifier for the genuine product. Please keep it safe and secure!

Website: www.lethigh.com
Contact Us: lethigh.com/contact